 


QUICK STARTER GUIDE

Mobile Appearance

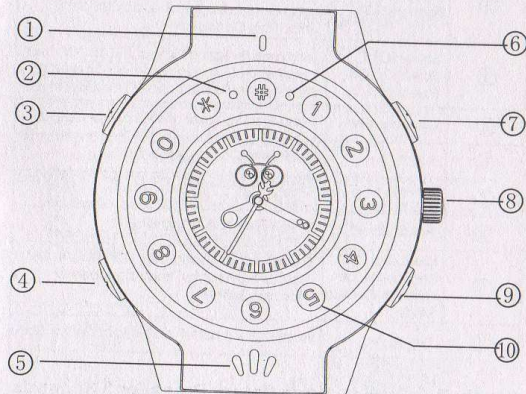


Key Features

Number	Name	Description
①	Microphone	micro receiver
②	Blue light	Blue flashing at standby mode, Good signal
③	Power On/Off Key Backspace Key	Long Press to Power On/Long Press for Power Off Under Standby Mode Long Press to Back to Standby Mode Under Any Condition
④	Speed Dial "3" Power On/Off Bluetooth	Short press for Speed Dial(Named 3 in SIM Card) Long Press For Switching Bluetooth On and Off Short Press for Pause Under MP3 Playback Mode
⑤	Loudspeaker	Hand Free Speaker or MP3 player Output
⑥	Red Light	Low Power/Charge Indicator
⑦	Speed Dial "1" SOS button	Short Press for Speed Dial(Named 1 in SIM Card) Long Press for SOS Help
⑧	Adjust Time	Button Pulling to Adjust Time
⑨	Speed Dial "2" Ring Tone Mode Switch to Vibration Mode	Short Press for Speed Dial (Named 2 in SIM Card) Long Press for Ringtone Mode or Vibration Mode
⑩	Dial Plate	From 0 To 9 * and # Numerical Key for Dial

Kindly Reminder : Long Press: Press for 3 Seconds
Short Press: Press for Once

First Time Use

1. Rear Cove Open, Lock and Reset

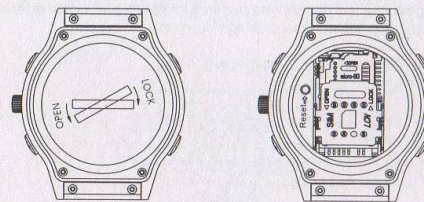


** Important Notification:

The rear cover turns clockwise to the position of locking device.

2. Insert SIM Card and SD Card


** Important Notification:

 Before insert SIM card, please insert SIM card in common mobile phone, and save four phone numbers of the Guardian and SOS. The name of the first guardian saves as "1". The name of second guardian saves as "2". The name of third guardian saves as "3". The number for help saves as "SOS".

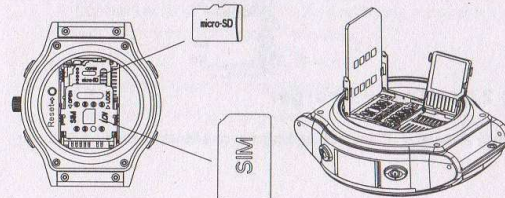


3、Battery Charging

 When charging, the red light on the position of 12 will turn on, and turn off with the battery full, and the blue light turn on.

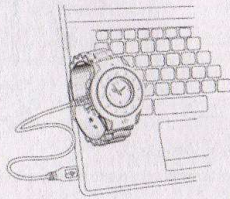

3.1 Using USB charging with computer

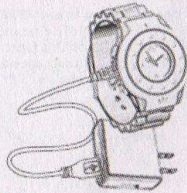


3.2 Use Travel Charger

Kindly Reminder: Please charging for over 4 hours at the first time use

Instruction of Function Operation

Power on and off

1. Power on

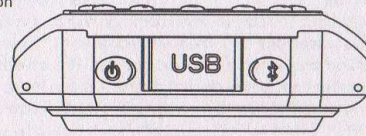

Press the button (power icon) for 2 to 3 seconds for power on, after that can not find SIM card, the voice will remind to insert SIM card. After power on and find SIM card but not register the internet, the voice will remind to check SIM card. After power on, find SIM card and register the internet, the voice will remind Power on and self-check normal.

2. Binding mobile phone

A: Binding the mobile phone: Save the binding phone number into SIM card with normal mobile phone. (The name of the authorized phone number saved as "1" the short codes are not authorized.)

B: Cancel the binding: Delete the Binding Phone number from SIM card with normal mobile phone.

3. Power Off

Long press for Power Off under Standby Mode

4. Restore factory setting: The guardian types "HF" message to children's watch phone with the binding mobile phone.

To make a call

1、How to save the speed dial number

A: Put the SIM card of the children's watch phone into the parents' phone, Put the number "1" "2" "3" in turn to set up the phone number and save into SIM card. You can set three common numbers to speed dial. For example: speed dial "1" the saved name is "1" and the number is the guardian's phone number. Speed dial "2", the saved name is "2" and the number is second guardian's phone number. The speed dial "3" the saved name is "3" and the number is the third guardian's phone number.

B: Operation steps

Change the SIM Card → set up the saved name
(Children watch phone SIM card) (Names saved as 1-3)

→ save the phone number → save into SIM card
(The phone number needed)


2. To call the Speed Dial

** Important Notification: To make a call should go back to standby mode, the voice will note that phone out

- 2.1、Short press the (power icon) button on 2 o'clock position to call the phone number named as "1"
- 2.2、Short press the (power icon) button on 4 o'clock position to call the phone number named as "2"
- 2.3、Short press the (power icon) button on 8 o'clock position to call the phone number named as "3"
- 2.4、Short press the (power icon) on 10 o'clock position to end the phone call.

3、Make a any call

Make a call with the dial plate under standby mode, there will be voice to note when entering the number, press the button on 2 o'clock position to call out

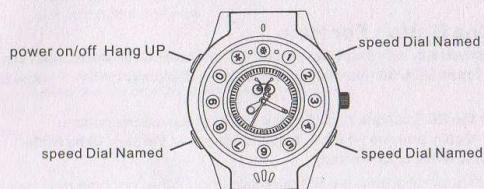

Answering a phone call

1、Call barring

To avoid voice phishing, the item default setting call barring

2、Cancel call barring


Cancel call barring operation: the guardian type "QXHRXZ" message to the item, after that all the calls can get through, if want to open call barring, the guardian type "HRXZ" message to the item.

Scene Mode Setting

Call Alert Mode


 
This machine is the default to remind model of ringing.
Long press the button on the 4 o'clock position under standby mode to set up vibration mode

SOS One Button For Help

1. After power on, long press the button  on 2 o'clock position under any mode to call SOS number and send the position information at the same time.

2. Under the SOS condition, dialing the first guardian phone number automatically and send the position information at the same time while nobody answer SOS number.

When nobody answer the first guardian phone, the machine dials the second guardian's phone automatically and sends the position information, after third times, the cycle stops automatically.

3. Under SOS condition, short press the button  on the 10 o'clock position to skip over the current dialing number for the next one; long press the button  on 10 o'clock position to back to standby interface.

Assistant Function

1. Mobile Phone Surveillance



Remote Monitoring under Emergency Condition--When Children meet urgent things, parents can hear speech clearly of the scene through monitoring the machine.

2. The guardian send text "JT" message to the child's watch phone, the watch phone can call back automatically, the guardian answer the phone call to remote monitor the voice on the site.

3. Low power prompt




Low power prompt automatically when child's watch phone are low power, it will send a message to the guardian's phone to remind charge in time.

4. After the red light flash slowly for 5-10 minutes, the watch phone will power off automatically.

 
5. Bluetooth Connectivity

** Important Notification: Before the connection, the guardian text message "BT NAME name of Bluetooth" to change the name of Bluetooth first.

1. Bluetooth Power On

Long press the button  on 8 o'clock position, the voice remind that Bluetooth is power on and red and blue light flash fast to pair the Bluetooth, at the same time open the Bluetooth headset to the pairing mode. After 2-3 minutes, when the Bluetooth pair is finished, the red and blue light stop flashing.

2. Bluetooth Power Off

Long press the button  on 8 o'clock position, the red and blue light flash fast, the Bluetooth switch off.

MP3 playback Function

Under standby mode, Long press the button on 10 o'clock position to open the MP3 playback function. Under MP3 playback condition, short press the button on 10 o'clock position to pause and short press to quit. short press the button on 2 o'clock position for turning up the voice, Long press for the last song, short press the button on 4 o'clock position for turning down the voice, Long press for the next song.

USB memory Key

It supports expanded largest 16GB memory Card, when the memory card insert watch phone, connect the computer directly, it can works as USB memory Key.

Bluetooth Assistant Functions

* After the child's watch phone connect with the guardian's mobile phone with Bluetooth, when the child's watch phone leaves the guardian's phone for 10 meters, there will be a message to remind.

relevant data and announcement

Project	Parameter
Brand	
Type	
Starting Time	2012
Color	Green, Black, Blue, light Blue, Red, Pink, Yellow
Storage Function	TF(microSD)
Network	GSM
Charging Voltage	DC-5V
Battery Type	High capacity lithium-ion polymer battery

Announcement:

Usage Condition: Please strictly abide by relevant laws of the state, this product may not be used for any illegal purpose, or at your own risk.

Battery: With the growth of the using time, the battery working time will be shortened. After a long time unused, please charge the battery fully first.

Documents Security: The machine is not professional storage device. We could not promise the integrity and security of storage documents, please backup the important documents on computer or the other storage device on time.

Working Temperature: -20-40 degree centigrade

Cleaning Requirement: Do not the item under high dust density environment to avoid the screen and other parts of contaminated dust, affecting the service life. You can clean the item with soft cloth.

Waterproof Explain: This machine is not full waterproof function of the whole body; please do not place the whole machine into water to avoid the damage of internal parts. If submerge the machine careless, please stop any operation to open the cover and take down the battery, Please reusing the machine after relevant parts are dry.

Other issues: The machine is precision electronic products; please avoid massive attacking and shaking. Do not use it under high magnetic field and strong electric field.

Additional Remarks: About the other unknown issues, please contact the customer service.

Marked with * before function, it refers to specific models.