

DIRECTORY

CHAPTER 1 BASICS	2
1.1 INTRODUCTION.....	错误! 未定义书签。
1.2  On the user's manual and system upgrades	
错误! 未定义书签。	
1.3 SAFETY	错误! 未定义书签。
1.4 GENERAL NOTES.....	2
1.5 NOTE USE OF MOBILE PHONES.....	3
1.6 BATTERY HANDLING PRECAUTIONS	4
1.7 NOTE THE USE CHARGER	4
1.8 CLEANING AND MAINTENANCE.....	5
1.9 EMERGENCY CALL.....	5
1.10 GENERAL NOTES.....	5
CHAPTER 2 BEFORE USING	错误! 未定义书签。
2.1 TECHNICAL PARAMETERS.....	6
2.2 SIM CARD	6
2.3 T-FLASH CARD.....	错误! 未定义书签。
2.4 BATTERY.....	7
2.5 BOOT AND SHUTDOWN.....	7
2.6 USE OF USB STORAGE FUNCTION.....	错误! 未定义书签。
2.7 HEADPHONES.....	错误! 未定义书签。
CHAPTER 3 BASIC DESCRIPTION	9
3.1 KEY FEATURES	9
3.2 PHONE FEATURES	错误! 未定义书签。
CHAPTER 4 MENU FUNCTIONS	12
4.1 INFORMATION.....	错误! 未定义书签。
4.2 MULTIMEDIA.....	错误! 未定义书签。
4.3 TOOLBOX.....	错误! 未定义书签。
4.4 SET UP	错误! 未定义书签。
4.5 PROFILE.....	错误! 未定义书签。
4.6 ADDITIONAL FEATURES	错误! 未定义书签。
4.7 NETWORK SERVICES.....	错误! 未定义书签。
4.8 SHORTCUT FUNCTION.....	错误! 未定义书签。
4.9 DOCUMENT MANAGEMENT	错误! 未定义书签。
4.10 PHONE BOOK	错误! 未定义书签。
4.11 FUN&GAMES	错误! 未定义书签。
4.12 CALL CENTER.....	错误! 未定义书签。
4.13 MODE IS SET (PROJECTION FUNCTIONS).....	错误! 未定义书签。
CHAPTER 5 OPERATING INSTRUCTIONS IN ENGLISH AND CHINESE INPUT METHOD	错误! 未定义书签。

签。

CHAPTER 6 FREQUENTLY ASKED QUESTIONS..... 错误! 未定义书签。

APPENDIX..... 错误! 未定义书签。

Chapter 1 Basics

1.1 Introduction

Thank you for choosing our company's dual card dual standby mobile phone projector, you can read the manual, a comprehensive understanding of the use of this device and enjoy its perfect functionality and simple method of operation.

In addition to the basic function of this phone call, it also offers projector, camera function cameras, MP3 players, MP4 players, calendar, alarm, calculator, stopwatch, currency converter, e-books, games and other practical features to facilitate your work and leisure activities, in addition, this machine is personalized user interface, its improved features designed to meet your needs.

Manual content is subject to change mobile phone material object, without notice, interpretation of the Company.

1.2 on the user's manual and system upgrades

In order to continuously improve the overall characteristics of mobile phones, the company based on the need for production, sales and after sales of mobile phones to software or hardware upgrade. Upgraded mobile telephone Gongneng, specifications, performance and use changes will occur to Keneng causing user manual content & Yidong phones in certain areas of the Buyi Zhi. Relevant content to mobile phone users in the hands of subject. Software upgrade will wipe out all the information within the mobile phone, so the upgrade, please record, back up all data within the mobile phone to avoid the loss of information.

1.3 Safety

- If your phone is lost or defective, please notify the telecommunications sector, or its outlet, to disable the phone and SIM card. This will take you from other people call the economic losses.
 - When you are with the telecommunications sector or its outlet, they need to know your phone's IMEI number (printed on the label on the back of the phone, remove the battery can be found). Please take good care of this number for future needs.
- To make your phone from misuse, please take precautionary measures, such as:

—Set up mobile phone SIM card's PIN number, and in others to know the time changes.

—Leave your car, please do not put cell phones on the easy to be seen, the best portable or locked in the trunk.

—Set a limit.

1.4 General Notes

- your mobile phone can only use the company's designated battery and charger. Other products use may cause battery leakage, overheating, bursting and fire.
- Do not bang, shake or throw cell phones in order to avoid failure and fire phone.
- Do not put batteries, cell phone, charger in the microwave oven or high pressure equipment, or may cause damage and fire and other circuit accident

- Do not place flammable or explosive gases in a mobile phone, mobile phones may cause a malfunction and cause a fire.
- Do not use mobile phones in high-temperature, or where a large number of dust, or may cause malfunction.
- the phone on the children's hard to reach places to prevent their children as a toy, causing personal injury.
- Do not use mobile phones on uneven or unstable on the counter, to prevent malfunction or damage caused by falling.

1.5 Note use of mobile phones

Please read before using the following precautions to ensure your health and safety on the property. If the violation of the following matters, you may cause dangerous or illegal. Please note!

➤ **Safety**

When driving, try not to use mobile phones. When the call is unavoidable, after parking the call, or use the device. Safely on your mobile phone mobile phone cell phone machine blocks, not on the passenger seat or in an emergency braking will fall in place.

➤ **Flight Safety**

Interference caused by mobile phone signals may affect flight safety, the use of mobile phones in aircraft is very dangerous, is illegal. Air when you turn off your mobile phone.

Note: This phone has a timer function automatically start, please check your timer switch settings to make sure your cell phone during the flight does not automatically boot.

➤ **Medical sites**

Please respect the existing rules and regulations place. In the medical establishment or near medical equipment, turn off the phone. The use of any wireless transmission equipment, including mobile phones, are not fully protected against medical device interference. Other electronic devices may be interfered with. If you have any questions in this regard, please contact the doctor or medical equipment provider

➤ **Special Provisions**

In any potentially explosive areas (such as: fuel depots, chemical plants, blast site, etc.) should be off the phone. Marked in any place prohibiting the use of mobile phones, please turn off cell phones.

In the gas station, do not use the phone will turn it off.

The use of certain electronic equipment of mobile phones RF signal interference, it should immediately turn off the phone.

Do not weak signal or high-precision electronic device near the phone.

- Do not force on the LCD screen or use it to beat other things, otherwise it will create LCD panels and LCD damage the leakage of liquid. If the liquid crystal fluid into the eye will be blind to danger, then wash the eyes immediately with water (do not rub the eye) and went to the hospital.
- Non-professionals should not be demolished or converted mobile phone, mobile phone or cause damage, leakage and circuit failure. Will also make you lose your warranty rights.
- In rare cases, the phone in certain models of car use, may adversely affect electronic equipment inside the car, then do not use the phone in order to avoid loss of security guarantees.

- Do not use needles and other sharp stuff written keys, otherwise they will damage the phone or a miss-pick.
- If the antenna is damaged, please do not use the phone, or may cause personal injury.
- avoid the phone too close to the magnetic card and other objects, mobile phone radiation may remove the floppy disk, savings cards, store credit card information.
- Please thumbtacks and other small metal objects on the mobile handset away from the place. Work with the magnetic speaker, will attract small metal objects, which may cause personal injury or damage the device.

1.6 Notes on battery

- Do not throw the battery fire, otherwise it will cause the battery to fire and burst.
- install the battery, do not force pressure, otherwise it will cause battery leakage, overheating, bursting and fire.
- Do not use wires, needles and other metal objects to short-circuit the battery, or to the battery with necklaces and other metal objects together, otherwise it will lead to battery leakage, overheating, bursting and fire.
- Do not solder the battery ends, otherwise they will cause leakage, overheating, bursting and fire.
- If the battery fluid into the eye will be blind to danger, then please do not rub the eyes, rinse with fresh water, and then immediately to the hospital.
- Do not disassemble or modify the battery, otherwise it will lead to battery leakage, overheating, bursting and fire.
- Do not the fire or heater next to the hot areas such as the use or leave the battery, otherwise it will result in battery leakage, overheating, bursting and fire.
- If the battery in use, charging or save in the process of heating, discoloration, deformation and abnormal, please stop using and replace the new battery.
- If the battery liquid touched the skin, clothing, which may cause skin burns, immediately rinse with water, if necessary, please seek medical treatment immediately.
- If the battery fluid leakage or strange odor issue, please take it from the fire next to the open, avoid fire and burst.
- Do not wet the battery, otherwise the battery overheating, smoke and corrosion.
- Do not direct sunlight or near high places car or leave the battery, otherwise it will lead to fluid leakage and overheating, may reduce the skills and shorten life.
- Do not charge for more than 24 hours.

1.7 Precautions using the charger

- use 220V AC. Use other voltage can cause leakage, fire and damage to the cell phone and charger.
- against short-circuit the charger, otherwise it will cause electric shock, smoke and damage the charger.
- Do not damaged in case of power line use the charger, otherwise it would lead to a fire and electric shock.
- please clean product in the power outlet on the dust.
- Please do not water storage containers, etc. in the charger next to the charger to prevent overheating caused by water spills, leakage and malfunction.
- If the Chargers come into contact with water or other liquid, to immediately disconnect the power from the outlet to prevent overheating, fire, electric shock and charger failure...

- Do not disassemble or modify the charger, otherwise it will lead to personal injury, electric shock, fire and damage to the charger.
- Please do not use the bathroom where high temperature, charger, or may cause electric shock, fire and damaged charger.
- Please do not touch with wet hands, chargers, cables and power outlet, otherwise it will cause electric shock.
- Do not place heavy objects on the power cord or modified wire, otherwise it will cause electric shock and fire.
- cleaning and maintenance before the first plug from the socket set aside.
- unplugging the charger when you seize, pull the power cord may damage the wire, causing electric shock and fire.

1.8 Cleaning and Maintenance

- mobile phones, batteries and charger is not waterproof, do not use the bathroom where high temperature, also have to avoid getting wet.
- Use a soft, dry cloth to clean the cell phone, battery and charger.
- Do not use alcohol, thinner or benzene solution, wipe phone.
- a dirt outlet will lead to poor contact, power-down, which can no longer charge, periodically clean.

1.9 Emergency calls

Determine the mobile phone is turned on and in service conditions, can enter the number of emergency calls a call, such as 112 and so on.

Note: As with any mobile phone, due to coverage reasons or wireless signal transmission conditions, may not support this paragraph have the characteristics of mobile phones and some networks did not even support the 112 emergency call service. Therefore, a particularly critical communications (eg medical emergency) should not rely solely on mobile phones. Check with your local network operator and check.

1.10 General Notes

Mobile:

- Please 50C ~ 400C temperature and 35% ~ 85% humidity environment, use the phone.
- If possible, away from the ordinary telephone, television, radio and office automation equipment is used on mobile phones, so as not to affect the use of these devices and mobile phones effect....

Battery:

- Keep the battery on from direct sunlight, cool well ventilated place.
- phone battery life is limited. Battery charge time, became increasingly frequent shorter. Multiple charge fails, the battery life has done, should be replaced new battery type specified.
- Do not throw old batteries in the general garbage. Used batteries in a clearly defined treatment areas, please do so in accordance with the instructions provided.

Charger:

- Do not charge in the following areas: direct sunlight; the outside temperature is below 50C or above 400C areas; humidity, dusty places or where vibration (may cause failure); TV, radio and other electrical appliances in the vicinity (will affect the image, sound effects).

Chapter 2 before use

2.1 Technical parameters

Host

108.6x48x16.5 (mm)

Nominal voltage 3.7V

Charge limit voltage 4.2V

Rated Capacity 1100mAh



1, projection lens; 2, before the cameras; 3 volume keys; 4, projection switch key; 5 navigation keys; 6, shortcut function keys; 7, audio player shortcut keys; 8, SIM card 1, card 2 dial key; 9, * key; 10, USB and charging interface; 11, the handset; 12, OK button; 13, return key; 14, TV shortcuts; 15, hook key; 16, the number keys; 17, # key; 18, Mike; 19, TV antenna; 20, focusing ring; 21, after the cameras; 22, flash; 23, the battery cover; 24, speaker holes

2.2 SIM card

You must use the phone before the phone's SIM card inserted in an effective, SIM card into the digital GSM network of your keys.

And the establishment of network connections of all relevant information, and initialize your call records are recorded in the SIM cards of the metal surface area, with record cards are your SIM cards in the phone book to store and receive a name, phone number and short messages, SIM cards can be removed from your mobile phone, a GSM mobile phone into any use (the new phone to automatically read the SIM card)....

In order to prevent loss and damage card information, should avoid touching the metal surface area, and away from the SIM card on the electric, magnetic place. Once the SIM card is damaged, you will not have access to GSM networks.

Note: be sure to remove the SIM card before the phone off. There is absolutely prohibited in the case of an external power source connected to insert or remove a SIM card, or SIM card may be damaged.

SIM card insertion and removal

- SIM card in a card in general, in the assembly, you must carefully remove it.
- off the phone, remove the battery and other external power supply.
- the SIM card into the SIM card seat.
- When you need to remove the SIM card, first shut down, removing its battery, then remove from the SIM card connector SIM card.

Note: If the SIM card inserted wrong or SIM card is corrupted, the boot will show "Please insert the SIM card." Remove the SIM card after shutdown, check the correct path to re-insert the plug.

If the display SIM card is permanently locked, contact your network operator.

2.3 T-Flash Card

This machine supports the use of T-Flash memory card.

Note: T-Flash cards are small objects, please do not let children touch, so as not to be swallowed mouth!

How to install T-Flash (memory) card

Before the start following, be sure to turn off the phone, unplug the charger, remove the battery.

First open the T-Flash card plugs into the T-Flash card slot, put in place together on the T-Flash card can be tied.

2.4 Battery

1. Under normal circumstances you can display the battery icon in the upper right corner shows the remaining battery power.

2. When the battery is low, the screen shows "battery low." If the profile of the warning sound is turned on, also issued a warning beep.

3. initial state battery charge about 50% of the electricity, opening them to use. New battery charging at least 14 hours, to be thoroughly used up first (power consumption and fail to

boot) and then fully charged before use; the second time also thoroughly used up before full power, so that three consecutive cycles, the battery was easy to achieve the best use of the state.

Note: The actual standby and talk time and phone usage and the local network environment, SIM card and cell phone real settings.

2.5 Remove the battery and installation

1. Remove the following steps→ when: ① downward push the back cover; ② downward lift the battery out.

2. installation, follow these→ steps: ① the battery into the battery slot card; ② Push the back cover up to clamping.

Battery charge

1. the charger plugged.

2. the charger connector is→ properly inserted in the phone charging interfaces. Then, the phone battery indicator top right corner of the screen will flash cycle: If charging has been shut down, the charging indicator will appear on the screen picture, the battery charging. If the phone is still in the excessive use of power is low, the charge may be required after the beginning of a period of time before the charging indicator appears on the screen.

3. When the screen upper right→ corner of the battery indicator shows full, and no longer flashing, indicating that charge has been completed. The process usually takes 3 ~ 4 hours. During charging, batteries, cell phone and charger become hot, is normal.

4. charge and→Upon completion disconnect the AC power outlet to connect the phone and charger. If you do not have to disconnect the charger with power and phone, then after quite a long time (about 5-8 hours), battery power consumption to a certain extent, cell phone began charging. We recommend that you do this operation because it will be your battery performance and life of some impact.

Note: The charge must be placed when the temperature is +5 C ~ +40 C for ventilation, and must use the charger provided by manufacturer, the use of an unapproved charger may be dangerous, and breach of the phone recognition and warranty.

When the phone is automatically turned off, or show running low warning "battery low", they shall charge the battery. If the battery does not run out before charging the phone will automatically reduce the charging time.

The mobile phone manufacturers to provide standby and talk time is based on the ideal working environment. In actual use, the battery life as the network conditions, working conditions and patterns of use vary.

Please make sure the battery is charging installed, remove the battery can not charge.

2.5 Startup and Shutdown

1. Press and hold button, open the→ phone, the screen shows the boot animation; long this button, turn off the phone.

2. If you first open the phone, but did not insert the SIM card, the phone will prompt you to insert the SIM card, insert the SIM card, the phone will automatically test the SIM card is available.

3. Then the display will sequence→ the following tips:

- Enter PIN (if you set a SIM card password, please read the paragraph "Security Settings" to understand the details of operation)

- Enter the phone password (if you set the phone lock code)
- 4. SIM card decryption is successful, the phone automatically searches for available network (the screen to find the network).

Once contacted, the network provider's name will appear in the top of the screen. At this point that the normal phone into standby, can be properly used.

Note: If the screen prompts "can make emergency calls (Emergency)", means that you have in the normal network coverage (service area) outside, but you can still send an emergency call signal strength.

2.6 using the USB storage function

Before use Note:

1. Please connect USB devices to maintain the correct and stop the USB device operations.
2. Do not use the windows format command on the machine mobile disk format operation, otherwise it will cause irreparable damage.
3. USB Operating Environment:
 - ★ windows2000/xp.
 - ★ For other operating systems, may need to install USB drivers can be successfully established PC-connected to the phone.

Powered on, insert USB connected computer, the phone prompts three options:

4. Storage devices: Select this option, the access to a computer in my computer "Removable Disk", operable mobile phone and computer data transmission.
5. Network Camera: Select this option through the phone's camera can take pictures, and video capabilities can be achieved, such as: use QQ chat video chat with each other.
- 6 Serial port: Select this option to be prompted to install the computer hardware, return to start the charging status.

2.7 headset

When you insert the headset phone headset interface, the phone's profile will automatically switch to headset mode. Can be set to automatically answer, you can also listen to music through headphones or receive / make calls.


Chapter 3 Basic Description















3.1 Key Features

1. right soft key: lower right corner of the implementation of interface instructions function.
2. left soft key: lower left corner of the implementation of the interface functions of instruction, the idle screen to enter the main menu interface.
3. dialing keys: make and receive calls.
4. hook key: the end or reject the call; long this button switch machine; in other cases, click this button for normal returns to standby.

Note: This manual, "press a key" refers to the press release after the key; "long press of a button" refers to press the button for 2 seconds or 2 seconds.

Icon Description:

Icon	Explain
	A card signal strength

	2 card signal strength
	Ring mode
	Vibration mode
	Silent mode
	Vibration plus ringtones
	After the ring vibration
	A new short message card
	2 new short message card
	Open alarm
	Battery
	New MMS
	SIM1 GPRS connected
	SIM2 GPRS connected
	Stopwatch Open
	The keypad is locked
	Keyboard is not locked
	Call forwarding is turned on
	1 card Missed calls
	2 card Missed calls
	Chat Room 1 has been opened
	Chat Room 2 has been opened
	A full card information
	2 card information is full
	Headset is connected

➤ Phone features

When the network provider's logo appears on the display, you can make or receive calls. Upper left corner of the bar display shows the signal strength of network signal (including 4 that the strongest signal). The impact of voice quality by the relatively large obstacles, so the movement in a small area can improve call quality.

3.2.1 Call

1. Domestic→ Phone:

In the standby screen, enter the phone number using the numeric keypad, then press the dial key to start the call. Press hold button, then end the call. If you need to change the phone number, press the right soft key to delete characters entered. Dial-up call when the display shows the animation. Other party to answer the call after the display will indicate status information, if you open a connect tone, there will be a tone.

If you end the call press the end key to end the call.

Area code + phone number + dialing keys

2. call fixed telephone extension:

Some fixed-line extension can not directly dial, you need to dial the switchboard, dial ext. If you enter a phone number, extension number in the switchboard number and inserted between the symbol pause character "P", the machine will complete all the dialing for you

automatically dial ext. Enter "P" is a long way to press * (At this point the screen will display symbols "P")

Area Code + Tel No + P + extension number + dialing keys

3. International Phone:

To make international calls, press * be long until the display shows international call prefix symbol "+", which will allow you to not know your local international telephone prefix number (example: in China is 00) any one from the States call.

Enter the prefix number, then enter your area code to call the state and complete phone number. Country code according to usual practice, Germany 49, Britain 44, Sweden, 46 and so on.

And often make international telephone calls, dial the city code should be removed in front of "0."

For example: from other countries call hotline should be set aside:

+86 21 114

+ Country code + phone number + dial the complete key

4. Emergency Call:

If the phone is in network coverage (check the phone display through the upper left corner of the network signal strength indicator bar that), you should be able to call emergency services (even without SIM card can also carry out an emergency call). If your network provider does not offer roaming services in the region, the display will show "can make emergency calls (Emergency)", to tell you can only carry out such calls.

3.2.2 Calls

Under normal circumstances, a call, the phone ring or vibration, by dialing key or center key to answer.

If you set any key to answer the open, press any key (except the hold button) to answer the phone.

If the headset has been plugged in, you can also use the button on the headset to answer calls. If you are not convenient buttons can be set to automatically answer the open, and the headset has been plugged in, the ringing or vibration in 2 seconds, the phone automatically connected.

If the caller can be identified, then the display caller's phone number (if your phone has caller's phone records storage, display caller name). Using the menu or the phone book, you can receive calls.

3.2.3 refuse to answer the call

1. a call, press the hold button→ can refuse to answer the call.

3.2.4 call menu

State during a call, press Options to enter the call menu, call the menu operation method and operation functions the same as the menu.

The call menu during a call only to see, and call waiting, call hold, multi-party conferencing feature requires network support, please contact your network provider.

In the call menu, you can proceed as follows:

1. Single reservations call: keep→ the current call or restore a call on hold.
2. end of the one-way call: end→ the current call.
3. New call: call a new telephone→ links.
4. Telephone Directory: enter the phonebook menu.
5. Information: access to the→ information menu.
6. Recording: to record voice→ calls.
7. Background Music: play call can→ be located in different background effects.
mute: No Send / Resume to send→ local voice.

→ Dual Tone Multi-Frequency: to open or close the dual tone multi-frequency.

Multi-party call

- Switch: to maintain the band's side and talk to exchange.
- Conference: Start conference call.
- End of the single call: end the current call is active.
- End all calls: End all calls.
- Transfer: the current call transferred to other phones.
- New call: call a new telephone links.
- Phonebook: access the phonebook menu.
- Information: access to the information menu.
- Recording: record a voice.
- Quiet: do not send / resume to send local voice.
- DTMF: on or off DTMF.

Note: Some menu items only appear in the circumstances to be determined. Such as "switch" only exist in the state of the phone and call phone only appears to be suspended

Chapter 4 Menu functions

4.1 Information

In this menu, you can use SMS, MMS, chat, voice mail and cell broadcast. These functions depend on service providers to support the network services.

4.1.1 SMS text messages

SMS (Short Message Service) function is a network service, your network may not support the service. You can fax, pager, e-mail and text formats such as call information. Phone call through text messages, you must obtain a copy of the short message service provider center number, to input mode settings menu option short message center number.

Icon will appear in the status indicator area, said the new text messages.

Note: Some networks may not provide short message service, and some networks only within its own network to support short message service.

★ Write a message

Using this menu, you can write a short message and insert the EMS object.

In the [Information] menu, choose [to write messages] menu.

Write text messages. You can insert frequently used phrases and objects, and change the text format and input.

Note: The text formatting options include:

- Text size: small, medium and large
- Font: bold, italic, underline, strikethrough
- Align: Automatic, left, center and right
- paragraph: Automatic, left, center and right

Preparation of complete short message, press [Options] soft key (left), and then select "Send to." One can choose the following options:

- Send: to send a short message to the recipient mobile phone number. Select this option does not save text messages.
- Editor To: Select Edit list can add up to 10 recipients
- Remove Recipient: remove the selection from the list of recipients.
- Remove all recipients: to remove from the list of all recipients.
- Save to Drafts: to save the edited short message to the Drafts

You can directly enter the number or press [Search] soft key (left) extracted from the phone book.

The phone screen shows all the receiver of the message sent successfully or failed.

Note: If a short message in the preparation of an incoming call, the phone will back up the short message, in the end the call, the phone will display [written text] mode. You can continue to write short messages, the original data is not lost.

★ Inbox

SIM card inbox

Using this menu, you can view or read the new short message has been read text messages.

The list will show the sender's phone number or name (in the phone book has been stored into the case).

If you select [OK] soft key, you can view the information content.

Press [Options] soft key displays the following options:

- Re: can restore the sender.
- Call From: You can call the sender directly from here.
- Forward: You can forward text messages.
- Delete: to remove the read text messages.
- Remove All: You can delete all inbox SMS.
- Advanced options: information can be copied, moved and other operations.

★ Drafts

Can not send text messages or editing to save completed.

★ Outbox

SIM card Outbox

Using this menu, you can browse the stored information has been issued or send text messages short.

There forward, delete, copy to the phone, move to the phone, delete all, copy all, move all, use numbers, use the URL option for you to choose.

The phone screen shows all the receiver of the message sent successfully or failed.

Note: If a short message in the preparation of an incoming call, the phone will back up the short message, in the end the call, the phone will display [written text] mode. You can continue to write short messages, the original data is not lost.

4.1.2 Broadcast Message Cell Broadcast

Cell Broadcast SIM card

On the cell broadcast topics information, please contact your service provider.

In the following circumstances, when the received cell broadcast, the phone will immediately show the message:

The phone is in standby mode;

Receive mode

Option is set to open;

Channel list of the information channel is currently used.

Note: This service needs network support.

Press the left soft key, you can open, close receive mode,

Allows you to enable or disable the text message cell broadcast reception.

Read information

Using this menu, you can read all the cell broadcast received a text message. The title screen theme of the name of the area to display information. Whenever new content received, the phone will update the information content of the subject.

Language

Allows you to choose to display the usual mobile cell broadcast language. Number of languages to choose depends on your SIM card.

Channel Settings

Allows you to specify to receive cell broadcast channel.

This menu allows you to use select, add, edit and delete options to read, add and delete lists.

List the number of items to choose from depending on your SIM card. It will display all of the items you select.

Note: For details of available topics, please contact the network service provider.

4.1.3 Broadcast Message Template

In this menu you can edit, and delete common phrases. You can save up to 10 commonly used phrases. Such as "dashing back to the unit phone", "I'm busy", "how like today," and so on. Each phrase can save up to 40 commonly used words. Writing text messages, you can select [Common phrases] option to use the common phrase.

★ SMS settings

SIM card information to set

You can set the default short message: mode settings, the status is set, memory status, storage location.

Mode settings

You may, at its service provider and service plan to the short message mode.

Note: You can edit mode by the following procedure:

● folder name: Edit the folder name.

- SMS center number: You can obtain this number of network providers.
- SMS is valid: in the maximum, one hour, twelve hours a day, three days and the week selection.
- Send format: you can fax, pager, e-mail and text selection.

State set

You can enable or disable the following short message status set.

News Report

News reports can be turned on or off. This feature is turned on, the network will notify you whether the short message has been received.

Reply Path

This menu allows the receiver via the short message information center for your short text messages back to you (if the network short message service). Press [Select] or [Cancel] soft key (left) can enable or disable this option.

Store sent message: save the short message and send it to the desired recipient.

Storage condition

Display SIM card or mobile phone short message capacity status.

Priority storage location

You can set the short message storage location: SIM card or mobile phone

4.2 Multimedia

4.2.1 Camera

1. Album: browse the saved pictures.
2. camera settings: Set the camera parameters.
3. Photo Set: Set the picture size and photo quality.
4. White Balance: Select a photo brightness.
5. Context Mode: Select the photo camera mode.
6. effects settings: set photo effect function.
7. Storage Location: Select photos stored.
8. Restore Defaults: camera settings revert to default settings.

4.2.2 Albums

Save cell phone store photos.

1. view: preview of selected photos to enlarge.
2. View mode: change the way the album view photos, select "matrix" or "list" mode.
3. Forward: Using selected photos as wallpaper, screen saver, switch machine animation, avatar, etc. calls.
4. Rename: change the file name of the selected photos.
5. Delete: delete the selected photos.
6. Delete all files: Remove all of the photos album.
7. Sort by: by name, type, time or size of the selected folder to sort photos.
8. Storage Location: Change and choice of reading and photographs are stored.

4.2.3 video recording device

Your phone provides video capabilities. Select the menu animation into the video device, press the OK button for video.

Press Options to:

1. Video Settings: Choose this menu to set the video device-related parameters.
2. video settings: Set video quality.

3. White balance: Select the video brightness.
4. effects settings: you can choose your video of this one special effects.
5. storage location: Choose Store to your phone or memory card.
6. Restore Defaults: Restore the default value.

4.2.4 Video Player

Play the user has saved the video. Functions as follows:

1. Play: Play the currently selected animation.
2. Rename: change the currently selected animation file name.
3. Delete: delete the selected animation.
4. Delete all files: delete all the saved animation.
5. Sort by: Arrange the current folder in the animation sequence (available by name, type, time, size, or none).
6. storage location: view the file storage path, mobile phone or memory card.

4.2.5 music player

Click the bottom left of the screen to enter a list of playlists, you can scroll to select a song to play.

Interface in the song list, then click the option to enter the bottom left of the screen some relevant set of songs.

Note: Currently the system does not support some non-standard MP3 format

1. Play: play the selected song.
2. For more information: see the song details.
3. Add to ringtone library: adding profile current song ringtone library.
4. Updated Playlists: updated track list.
5. Setting: The set of multimedia playback.
 - ① list: Set default path to read.v
 - ② automatically generated list:v each boot is automatically updated when the list.
 - ③ repeat: Open the song isv repeated.
 - ④ random: Open the the playback in random order.
 - ⑤ Background Play: open the thev music does not stop with the withdrawal menu.
 - ⑥ lyrics Show: On the function ofv copying a song in the corresponding format, copy the lyrics, you can play songs lyrics synchronized display.

Reminder: Users of mobile phones music player feature, please note that the volume adjusted to a suitable size to avoid hearing damage.

4.2.6 Recording

This machine supports three recording formats: AMR, AWB, and WAV formats, the user can set the feature from the options in a format selected for recording. Can call recording, sound recording files can be set to ring.

Press the left soft key to enter options:

1. New Recording: record a new voice.
2. Play: play the selected recording.
3. Additional: the selection of a certain sound recordings AMR format for additional recording.
4. Rename: change the name for the current audio file.
5. Delete: delete the current recording file.
6. list: the list of audio files.

7. Setting: Set the record file format.

4.3 Toolbox

You can use this function as a personal scheduler and calendar. This feature allows you to set alerts, like the alarm clock you are prompted to do the same. This menu also contains the world for you to view the world time clock.

4.3.1 Calendar

Memorandum of schedule to help you understand the need to dial the phone, meetings, courses, dates, anniversaries and other Do.

Press the navigation key to select the date you want to view. Moved last month or next month, and then press [Options] softkey, the following options:

■ view agenda

Allows you to view the task list and added task in the selected date.

Task items:

- Start time: enter the task of starting the year, month, date and time.
- End time: Enter the end of the mandate of the year, month, date and time.
- Notes (text entry): Enter a task
- Alarm clock: use the left / right navigation key, select "Open", "5 minutes ago", "15 minutes ago", "30 minutes of money" or "off."
- Continuous (time / day / Custom / weekly / monthly): Select the task approach.
- Location: Enter the missions.
- Priority: Select the task priority.

■ Add a schedule

Into other, conferences, courses, dates, telephone, Day six selected category.

■ Chinese (off / on):

Click the left soft key to select "Open" or "off."

4.3.2 Task

You can view all saved tasks. Can display a task or tasks stored in the toolbox. Memo shows the task from the beginning to the latest memorandum of tasks.

- View: You can view the details of the selected task.
- Add: You can add a task.
- Editor: You can edit the selected task.
- Delete: You can delete the selected task.
- Remove the task has expired: you can delete the selected task.
- Remove All: You can delete all the selected date are listed in the task.
- Send schedule: You can send SMS memorandum.

4.3.3 Alarm Clock

Through this menu, you can set the alarm clock rings at a specified time. You can save five alarm clock. Editing options include:

- alarm (open / closed)
- time (hours: minutes) to enter the 24-hour hours and minutes.
- ring mode (once / daily / Custom): Select the ringing mode properties of the task.
- Snooze time (default / 1 to 10 minutes): select Snooze time, the default is generally for 4

minutes.

- prompt type (ring / vibration / vibration and ring): ring selection task prompt manner.
- After you have completed the editing options, press the [Finish] soft key (right) saved.

4.3.4 World Time

Through this feature, you can use right / left navigation key to view the current GMT and the world's major cities. In the screen shows:

- City Name
- the current date and time

You can press the left / right navigation key to view the corresponding time zone in your city. The left soft key can also be turned on or off other cities start daylight saving time.

4.4 Setting

4.4.1 Mobile settings

Use this menu to set the phone to display and operate the set. Time and date, time switch machine, language, the default input method, the standby menu display, automatically updated, handwritten set, LCD backlight settings.

Time and Date

You can set the phone time and date.

Set City

This menu allows you to select the nearest city.

Time / date settings

This menu allows you to set the standby screen shows the current time and date.

- 1) HH: MM: input 24-hour hours and minutes, and then press the navigation key.
- 2) YYYY / MM / DD: Enter year, month and day.
- 3) daylight saving time: You can press the left / right navigation keys to select the function of daylight saving time on / off.

Click [OK] soft key (left side) storage time and date.

Formatting

Allows you to select the time display type: 12-hour and 24-hour clock. When you select 12-hour clock, you can use the navigation key to change AM and PM.

Time format settings

Date formatting

Timer switch

You can set the phone on and off schedule. When the scheduled opening and closing time, the phone will be arranged at the time of each open or closed. Phone is turned on and you hear ringing. This is useful when you are asleep on their own cell phone close in the morning to open their own cell phone, you will not miss any calls or reminders.

To set this option, press the [edit] soft key (left) and edit the following options.

- status (closed / open)
- Power on / off: press the left or the right navigation key to select the boot or shutdown.
- Hours: 24-hour entry time.

Language

This menu allows you to set the display language. Select your preferred language and press [OK] soft key (left) save the settings. Change the language setting in, the phone will display the appropriate language patterns.

Options include:

- English
- Simplified Chinese / Traditional Chinese

Preferred Input Method

This menu to specify your preferred input method. After the usual input in the set, the next time you edit the text input mode, it will default to the usual input by setting until you change to another input method.

Encoding

You can choose different coding

Standby menu display

This menu allows you to customize the way the phone displays the following items:

Wallpaper

You can choose your favorite picture as standby wallpaper.

Screensaver

This menu allows you to set the screen saver. If within a period of time without pressing any key, the selected pictures will be on the phone full screen.

Start animation

You can set the boot screen shows the animation.

Shutdown animation

You can set off the screen to display animation.

Show time is set

Can open and close the idle screen display time.

Greetings

Can set the greeting, the greeting is displayed when booting.

Designated function keys

This menu allows you to set the standby mode, 4 navigation keys to special functions.

You can up / down / left / right navigation key designated for a specific menu. Choose from the menu list, press [Enter] key to change the menu specifically designated.

Automatic Update

This menu allows the phone to automatically update the current date and time. Press [Open] or [Close] soft key (middle) can enable or disable this feature.

4.4.2 Mode setting

↵ Normal mode: normal usage patterns.

Flight mode: When you take the ↵ plane can be set to open the phone without any signal, but can still run other functions such as phonebook, games.

Power asked: will be asked at ↵ boot time.

4.4.3 Other settings

You can phone the backlight brightness and backlight time setting.

4.4.4 Network Settings

The menu features for the network services. Please contact service provider have this service, if you can book. These settings can affect your monthly phone bills and cell phone network performance.

SIM card network settings

Network Selection

Select the network, you can automatically or manually select the network service area for roaming outside the network.

Note: Unless you select the network and the network service area there is a valid roaming agreement between, or you can select the network.

- re-search: manual search.
- Select network: select an existing network.
- Select Mode: Select manual or automatic search mode.

Preference network

You can set the preferred network. Phone lists of public mobile phone network list.

Specific options are as follows:

- add from the list: the list from the public mobile telephone network to select, press [OK] button, then select the preferred network priority.
- New: add a preferred network.
- Change priority: according to the left and right navigation keys to set priorities.
- Delete: Delete from the public mobile telephone network list to select the preferred network.

4.4.5 Security Settings

Security settings can be in the "Settings" menu, select "Security Settings" sub-menu to optimize safe mode. These security settings to protect your privacy, prevent others without your permission through the use of the phone.

1, SIM card lock

In this menu you can set the phone security options, mobile phone or SIM card to prevent unauthorized use.

PIN code of your SIM card to prevent unauthorized use. If the current PIN code has been closed, select Open to open the PIN code protected, the next boot will ask you PIN code; if the current PIN code is already open, choose Close to close the PIN code protection, choose to change the PIN code can set the PIN code, Follow the prompts to enter the old PIN code followed by the new PIN code and repeat the PIN code.

Note: PIN code three times in the wrong if, SIM card will be locked, then you need to solve SIM card PUK code, need PUK code please contact your network provider, the initial PIN code is usually 1234, please as soon as possible to change the settings for their own password.

You must enter the PIN2, deactivate fixed dialing mode. If the SIM card does not contain PIN2, does not support this feature.

The fixed dialing mode, you can choose a variety of useful functions, as follows:

- View and Edit: Enter PIN2, you can view and edit a fixed number of entries.
- Add: Enter PIN2, you can add a fixed number.
- Delete: Enter PIN2, you can delete a fixed number.
- Short message: can a fixed number table to call the telephone number of text messages.
- Short: in number / name / order of select Short.

Note: on or off fixed dialing, require you to enter the PIN2 code, contact your network vendor access PIN2 code. After opening the fixed dialing into the card holder is displayed in the fixed dialing.

2, against dial-up

Active against dial-up mode, the phone users can dial the phone number against numbers table.

Call against numbers, they must enter the PIN2, close against dial-up mode. If the SIM card does not contain PIN2, does not support this feature.

3, change password

If you want to change your password, you must first enter the current password, then enter a new password. This function can modify the phone lock password.

Phone lock

If the phone lock is opened, the user must enter a password every boot. No password, you can not call other actions or dialogue machine.

Note: the initial phone lock code is 1122, you should change it as soon as possible for their own password. If you forget your phone password, you must contact your retailer or local authorized service center to unlock your phone password.

Keypad lock

As for the candy bar type phone, it may occasionally press the wrong key. To prevent these from happening, you can use the function key protection.

Can never / 5 seconds / 30 seconds / 1 minute / 5 minutes select the keyboard lock.

If you use the time to activate the Automatic keyguard function, each time the user must press the prompts, the prompts "press unlock button + * key to unlock the" unlock the keypad lock, but also through the touch screen slide unlock. If not unlock, you can not call or other operation of dialogue machine. Calls do not need to unlock.

4.4.6 External setting

Data accounts, GSM / GPRS related parameters set.

4.4.7 Factory Reset

This feature will be reset phone settings. But does not delete the downloaded content and the phone book records. Restore factory settings, it must enter the password.

Note: The initial password is "1122." Modify the password, sometimes requiring a password. If you forget your password, please contact the service center.

4.5 profile

According to the general, meeting, outdoor, indoor, headset personalized environment settings. Select a good environment, and then choose "open" active settings, personal settings on the sound and response mode set.

Personalization options are as follows:

4.5.1 General model

→ Open: Select the boot into normal mode.

personal settings: Select→ personal settings into the general pattern of the custom. Functions as follows:

- Ring setting: a call to change SIM card, SIM card 2 phone, alarm, boot, shutdown, message, ring tone, etc. type.

- Volume: adjust sound volume of ring tones and keypad tones.

- Prompt type: select a ring way: Bell, vibration, vibration and ringing, vibration then ring.

- Ringtones Type: soon as a row or a crescendo.

- Tone: Set the warning tones of certain events, error, network connection or the call connection sound.

- Answer Mode: Set any key answer is to open.

4.5.2 Conference on Pattern

Specific operations, please refer to the "general model."

4.5.3 Outdoor mode

Specific operations, please refer to the "general model."

4.5.4 Indoor Model

Specific operations, please refer to the "general model."

4.5.5 Headset

Insert the headset automatically when this mode. Specific operations, please refer to the "general model."

Note: The standby mode, press "#" key can be set or cancel the mute mode

4.6 Additional features

You can use this function as a personal scheduler and calendar. This feature allows you to set warning, the same as the alarm clock prompts you to do. This menu also contains the world for you to view the world time clock.

4.6.1 Calculator

With this feature, you can phone as a calculator. The basic arithmetic calculator functions and memory functions: addition, subtraction, multiplication and division; memory, clear the memory and the memory read. Calculated:

1. Using the number keys to enter the first digit.

Note: You can press [Clear] key to delete any mistakes and clear the display input.

The navigation key to perform the addition and [M+] operations; under the navigation key to the implementation of subtraction, and [M-] operation;

The implementation of the navigation key left multiplication and [MC] Clear the previous results of operations.

Right navigation key to the implementation of division operations and [MR] implementation of the read memory operation. "#" Number keys to enter the decimal point.

4.6.2 exchange rates

If you know the exchange rate, you can convert currency. Currency conversion:

1) Enter the exchange rate.

2) Click [OK] soft key (left side).

3) press the left or the right navigation key to select the currency conversion type. (Xxx: 1 or 1: xxx)

4) Press the navigation key and enter the amount of domestic currency.

5) Click [OK] soft key (left) getting results.

If the conversion of other currencies, press the navigation key and select the currency conversion type (xxx: 1 or 1: xxx), repeat steps 4) and 5). If you want to use other exchange rate conversion, click [Back] soft key.

4.6.3 code table

Time recording function with timer. Including the general stopwatch and more for stopwatch.

General stopwatch:

- Split timing: for recording time per cycle or per person.
- To take lap times: The individual as a unit, record the time.
- View recorded: time to view the record time.

More for the stopwatch: use the arrow keys, respectively four individuals, record four times,

and total time stopped, press the left soft key to long, clear record.

4.6.4 e-book

TXT e-book can read the format of the document, called the suffix through the USB cable to connect your computer to store copies of TXT documents Cary's Ebook folder, locate the folder can open the e-book, you can also directly open the e-book into the reading text.

Option Description:

→ Open the e-book: You can view the text.

Update: Update interface. →

system → default:

★ fonts: you can set the normal text, italic, rough to read the text.

★ font size: You can set the text font size, medium and small.

★ scrolling: You can choose to read a page or line of text.

★ Automatic Volume page: Select open or closed, open the auto-scrolling a page or row can be automatically read the text.

★ scrolling speed: You can select one, two, three, four, five.

★ full-screen: Select to open or close the full screen to read e-books.

★ encoding: you can choose GB2312 (Simplified Chinese), English (Windows), UCS2, UTF8. The default is GB2312 (Simplified Chinese).

★ Select store location: you can choose to documents stored in your phone or memory card.

Information: Display the text → of the detailed information (text name, size, format)

Delete: Delete this document. →

Remove all: remove Ebook folder → all documents.

Delete all: delete Ebook folder → all documents.

Sorting: You can select by → name, by type, by time, by size, and no arrangement of the document.

implementation of the system → default: OK, after the implementation of the system will be the default system default in all settings as default settings.

Assistance: to enter this menu → you can see the help information.

4.7 Network Services

SIM card comes with access to relevant content.

4.8 shortcuts

The phone offers a shortcut to open the main menu, select shortcut functions into a shortcut settings.

Set as follows:

Function in the main interface, select the shortcut a shortcut, press the center button to enter Edit / Add, select a menu, press the center OK button, the shortcut to set the finished article.

In the phone settings options for the designated function key shortcuts, standby mode, enter this function, select the appropriate shortcut to go directly to the function.

4.9 Document Management

This menu has been used to identify the remaining storage space and storage space.

4.9.1 Mobile

There are three options:

Open the new folder ● ● ● format

4.9.2 Memory Card

There are three options:

Open the new folder ● ● ● format

Note: The formatted data can not be restored, please use this feature carefully.

4.10 Phone book

Telephone directory phone book provides storage, management and services. In standby mode, the phone book menu and write SMS mode to enter the phone book.

Select a record can be used for the following:

1. See: You can view the currently selected contact information.
2. Send SMS: can be selected contacts
3. Call: You can record a call on the current selection.
4. IP dialing: you can set the IP dial-up.
5. Editing: editing the current record.
6. Delete: to delete the current record
7. Copy: You can copy the current record.
8. Mobile: You can record sound of mobile phones and SIM cards between mobile.
9. Send Contact: SMS can send contact information

4.10.1 Add Contacts

In the phone book to add a new telephone records. Can select stored as SIM card or phone.

Note: Both the storage format is slightly different.

4.10.2 Call Group

You can call the following procedure to set up and edit the group details.

● Group name: Edit the group name and press [Options] soft key (left), then select "Finish" to save the changes.

● ringtones: You can select the group received a call from someone to use when ringing. With left and right navigation keys to cursor to the left, right.

● Daitoutie: You can choose to receive the group when someone calls the phone book that you want to display. Can use the navigation keys to select the picture. To select a picture, press the [OK] soft key (left).

● Group members: Group members can add information.

4.10.3 phone book settings

You can view and edit the phone book as program settings.

★ storage status

Can view the phonebook (SIM card 1, SIM card and phone memory 2) in the store's name and phone number or the number of remaining available space.

★ preferred storage location

SIM card can select 1, SIM card mobile phone as a phone book in 2 or the memory of choice.

★ card set

Phonebook entries can be set in the nine projects (home phone, company name, e-mail, business phone, fax number)

★ my card

Can choose to edit my card and send my card.

★ card version

Can choose version 2.1 or 3.0 card version of the card.

4.10.4 Copy all

All telephone directory data can be copied from the SIM card to the phone, or copied to the SIM card from the phone. To back up the phonebook data from SIM card to the phone (or vice versa), this feature will be very useful.

4.10.5 to delete

SIM card or mobile phone can delete all the phone book data. In addition, you can individually delete the phone book data.

Note: Select Phone or SIM card deleted in its entirety, the need to enter the phone password (initial password is 1122).

4.11 Fun & Games

This menu provides the application of chest, QQ, mobile parks, intelligent puzzles, games and applications, so you call the game and have fun.

● game settings:

The game settings, apply the settings in the game.

Press the left and right navigation keys to select and press [OK] soft key to save the settings.

Background sound can switch on the game's set.

Sound can switch the game to set a specific sound.

Games vibration can switch on the game set in vibration.

Note: The above procedures (except only jigsaw puzzle) need network support, to be launched later in the GPRS network coverage area and when to use

4.12 Call Center

4.12.1 Call History

1) SIM cartoon, then record

★ SIM card does not answer the phone: allows you to view the most recent missed calls.

★ SIM card has dial: Allows you to view recent dialed calls.

★ SIM card has to answer the phone: allows you to view the most recent received calls.

★ delete call records: Allows you to delete a one-time information on all calls for each category.

● did not answer the phone: allows you to delete all missed calls information.

● have dial: Allows you to delete all dialed information.

● have to answer the phone: allows you to delete all missed calls information.

● Remove all: Allows you to delete all data calls.

★ Talk Time: This menu allows you to see dialed calls and received calls of the timer.

Timers are:

● Last Call Time: length of time the last call.

● dialed Total: since the last reset all the phone calls since the total length of time.

● has a total phone: since the last reset all received calls since the total length of time.

● zero for all time: allows you to reset the call timer.

Note: The service provider invoices in the actual time the call may be recorded at different times with the timer, depending on network features, rounding factors such bills.

★ SIM cartoon phone charge: You can view the last call or all calls. Only in the network service provider supports this service will display the cost. Options include:

● Last call cost: allows you to see the cost of the last call.

- All call costs: Allows you to view all call costs.
- call costs to zero: Allows you to reset the call cost.
- Fees Restrictions: Enter PIN2 and enter the maximum fee limit.
- Prices and rates: Enter PIN2 and enter the unit price limit.

Note: Not all SIM cards support this feature. The number of items in the list depends on the contents of your SIM card.

★ SIM card SMS Counter: You can view the SIM card 1 has been sent and received, the number of short messages.

Left soft key "Reset" to clear these two were.

Note: This feature has nothing to do with the SIM card, or replace the SIM card has been sent and received messages will not change the number.

★ SIM card GPRS traffic: you can see SIM card to send and receive GPRS traffic.

- Last transmission: a record of the last transmitted bytes.
- Last received: Record the last number of bytes received.
- Total delivery: a record total the number of bytes transmitted.
- Total received: Record total number of bytes received.

4.12.2 Call settings

SIM, then set cartoon

★ The machine number: This network service on your outgoing calls will notify the recipient of your ID.

You can set the following options.

- system default: the decision is to show or hide the network caller ID.
- Hidden Number: If you do not want their phone number, select [Hide ID] menu.
- Send number: your outgoing calls, the phone displays the caller ID.

Note: Some networks do not allow users to change this setting.

★ Call waiting: This network service can notify you when you are talking to a new call. You can only specify the call waiting for voice telephone option.

Options for each service are as follows:

- Start: activate call waiting service.
- Close: Close Call Waiting service.
- Query: Display the status of call waiting service.

★ Call forwarding: This network service can be incoming calls to your designated phone number.

For example: You may want to busy in their own business when the call forwarding to colleagues.

Call forwarding can be set as follows.

You must enter when in a call forwarding number.

- Divert all voice calls: Divert all voice calls.
- Contact not transfer: the service provider when outside the coverage of telephones.
- No Answer Transfer: You did not answer the phone adapter phone.

Note: The network may not receive more than a specified time delay after the charges.

- Busy Transfer: You are answering another call when the telephones.
- Divert all data calls: Divert all data calls.
- cancel the transfer: Cancel all call forwarding options.

Note: The phone call to set up your network, then the network would confirm these settings.

Select Cancel All to close all call forwarding settings.

Options for each service are as follows:

- Start: Activate the selected call forwarding services.
- Close: Close the selected call forwarding services.
- Query: Display the selected call forwarding service status.
- ★ Call Restrictions: This network service allows you to restrict calls. Call restrictions can be set as follows

Ban set aside

- All Tel: ban outgoing calls.
- International Tel: ban international calls.
- international non-domestic: When you are abroad, you can only call the phone within the country, and your own country (ie where the primary network provider) phone.

Ban call

- All telephone: No incoming calls.
- roaming calls: In addition to the main service area prohibit the use of mobile phone call.
Start limit
 - Open the ban as long as the call set up, is prohibited by the setting dial the number.
Removed the restrictions
- Close prohibited as long as the call set up, you can normally make a call, receive calls.

Change Password

Using this option can be set or modified from the service provider access to the call against the password. Before the new password specified must enter the current password.

Each profile are the following options:

- Open: Turn on the prohibition of the call option selected.
- Close: Close call options against selected.
- Query: Display the selected call option against the state.
- ★ Circuit Switching: Some SIM card supports two phone numbers, so you can use this option to convert numbers (lines).
- ★ closed group: complete closure group through the menu, and then call the information to the network. However, the options are subject to network availability.

3) Automatic redial

When the other line is busy, you can use this option to set automatic redial. If the [Auto Redial] is set to open, then a phone call can redial 10 times. Redial process is as follows: If the other party does not answer, the phone automatically hang up, then redial the phone number 1. When using headphones or a microphone, headphones or microphone according to the dial key or tangent key, then the call, the phone will automatically redial 10 times.

4) speed dial

This menu allows you to enable, disable and edit the digital keys [2] - [9] the speed dial function, you can "speed dial list" option in the edit speed dial list. Press [Options] soft key, select [Edit] and select items from the phone book. Press and can be used to call the number keys.

5) IP dial-up

The menu can be set by three IP numbers he needs.

6) More

- ★ Talk time display: you can set whether to display talk time.

★ Talk Time Tip: You can set the time prompted the call.

Close ● ● ● soon as cycle

Background noise: during a call can unlock the background sound effects

Automatic time-limited: you can set the limit of talk time.

4.13 mode is set (projection functions)

Here you can set the phone to normal mode and projection mode.

The phone offers projection function, select projection model projection module open, as a general projector use, the function is not affected at this time and collect. Through the press "Projection shortcut" to achieve internal data projector, projection screen you can then view the corresponding content, navigation, and confirmed by key to select and operate the appropriate menu, use the menu details please see the instructions that also the main interface can be further "mode setting" menu, select "internal data source projection", switch to projection mode, through the navigation keys and recognized Key to select and Caozuo corresponding menu, 各 menu, the detailed use instructions, see instructions. Projection capabilities in the open state, press "Projection key" successive access "bright" and "normal" mode switch, through the press "Projection key" to exit.

Note: At this point out LCD screen, touch screen feature is not available. Projection will be warming up when the phone shell, is normal

Chapter 5 Operating Instructions in English and Chinese input method

Input method for entering Chinese, Simplified Chinese, used in the preparation of short messages, phone book, greeting, memo function.

Note: In the editing interface, the # key to switch input methods.

Letter input method

The phone has uppercase letters, lowercase letters are two input methods. Letter input method and intelligent text input difference is that Lenovo does not have the function, on several occasions to enter the desired letter key. Each button corresponds to one input of a character. For example: Press 2, enter "A", press 3 keys, enter "D", continuously press 2 keys, select "A", "B", "C" or "2."

Digital Input

In this input method status, press the number keys to enter the corresponding number.

Pinyin input method

As a key on a lot of letters, the user through several keys to select a row on the button corresponding to the letter. For example, enter "see" the word, press the 5 key twice, enter the "k", then press the 2 key once, type "a", then press the 6 key to enter the two "n".

Stroke input method

The phone uses T9 input method strokes. The input method in accordance with the everyday habits of handwritten Chinese characters is made, you only according to the habit of handwriting, will split into the corresponding character strokes, and then followed by 1-5 key input corresponding to the strokes, the input process, the screen will always the corresponding Chinese character strokes display or radical, press the left and right arrow keys to navigate the candidate word, press the left soft key can be selected. At this point the phone will automatically associate

a new word, you can continue to be OK button.

Note: "6" key for the general stroke key, if not sure when a particular Chinese character strokes, click this button to replace.

The corresponding number key and the relationship between stroke

Representatives of key strokes bit name

Key position	Name	On behalf of stroke
1	Wang, mention	—
2	Vertical	
3	Write	丿
4	Point, press down	丶
5	Cross fold	ㄇ
6	Universal key	?

Chapter 6 Frequently Asked Questions

In order to avoid unnecessary service and save time and costs, in the mobile phone operation problems, please follow the self-control checks.

1. Handset is turned on request "Enter PIN code"

PIN code check is activated.

You must enter together with the SIM card access PIN. You can also turn off PIN code check function, see the details of mobile phone security settings.

2. Handset is turned on request "Insert SIM card"

Please check the SIM card is inserted in place.

3. Cell phone is turned on request "Please enter the phone lock code"

You set the phone lock.

You must enter a random password for the unlock.

4. No network

You may be in the GSM / DCS network coverage outside.

5. Button when the sound

Check the mute setting mode.

Check the key tone menu selection sound type and volume.

Check mode menu.

6. Call without beep

Check the mute setting mode.

Check mode menu.

7. The alarm time to time without ringing

Check the mute setting mode.

8. Can not make a call

May be set up against the call option. Check against the call menu.

9. Can not receive incoming calls

You may set up against call options. Check against the call menu.

10. Send text messages fail

In the short message to check the message center setup menu option.

11. Mute button and all the tone turned into vibration mode

Check the mute mode settings.

In standby mode, press the [# key], to withdraw from the model or into the patterns.

12. In the sound settings menu, the menu can not find some relevant sound

Check the mute mode settings.

In standby mode, press the [# key], to withdraw from the model or into the patterns.

Appendix Abbreviations and explanations

Information Broadcasting

This network service allows you to receive SMS text on various topics, such as location of the weather, traffic, local area code, local hospital

Taxis and pharmacy.

DTMF dial tone multi-frequency

Sound signal as the launch of the code can be used for telephone banking, access to receive equipment.

E-face images

In the e-mail, online chat, or text message into a number of the then representative of the emotional expression of images or input that can

Expression of emotion combinations.

Call waiting

Network to provide a service that allows you to answer another incoming call when the call without interruption current call, but different from the multi-party call, you

Only with one call, the other is maintained.

Call Transfer

Network to provide a service that allows you to transfer under different circumstances would call to the specified number. Usually divided into: Divert all voice calls,

When not connected to divert calls, no answer when the divert calls, divert calls when busy, divert all data calls.

GSM

GSM is the world's mobile communications system, is the world's most widely used digital mobile communication systems.

GPRS

General Packet Radio Service GPRS is the abbreviation, it can transmit high speed data packet.

Network service operator

You must be a network user can use the phone. Services from the network operator to obtain the phone SIM card installed in the.

MMS (Multimedia Messaging Service)

Multimedia Messaging Service MMS is the abbreviation. Transmission of data may include text, images, sound and video.

MP3

MP3 (MPEG-1 Audio Layer-3) is a standards based technology and small compressed files (digital files about 1 / 12)

However, there are digital files when playing the same sound quality.

PIN (personal identification number)

Into the SIM card option is required when certain functions of the authority of the identifier. From 4 to 8 digits, could modify it.

PIN2 code (Personal Identification Number 2)

SIM card into a specific menu option to the authority of ID required. Some countries do not with the SIM card PIN2 code.

WALKTHROUGH

In the network services provided outside the mobile phone.

SIM (Subscriber Identification Module)

SIM card contains the network user information, security information and personal telephone directory memory.

SMS (short message service)

Center of the network to send SMS, receive text messages. The services must be supported by network service providers.

WAP (wireless application protocol)

Development of mobile communication devices for the standard agreement that allows users to quickly and easily enjoy the Internet network information and services.